

SETUP

INSTALLING BATTERIES

Your thermometer requires two AAA batteries (not supplied) for power. Batteries are available at your local RadioShack store or online at www.radioshack.com.

Press the tab on the battery compartment cover and lift it up.

Insert two AAA batteries into the compartment as indicated by the polarity symbols (+ and -) marked inside. Then replace the cover.

MOUNTING

You can mount the thermometer on any flat surface using its built-in stand, or mount it on a wall using a screw (not supplied).


Choose a location indoors near a window so you can route the thermometer's outdoor sensor outside.

CAUTION

- Do not place the thermometer or remote sensor in direct sunlight.
- Do not place the thermometer and sensor near electrical appliances or heating or air conditioning vents and radiators.
- Do not place the thermometer in water or in a location where it is likely to get wet. Only the remote sensor and its cord are water-resistant.

CHANGING THE DEGREE FORMAT

You can view the temperature in either Fahrenheit (F) or Celsius (C) format. To change the degree format, set C/F on the back of the thermometer to the desired format.

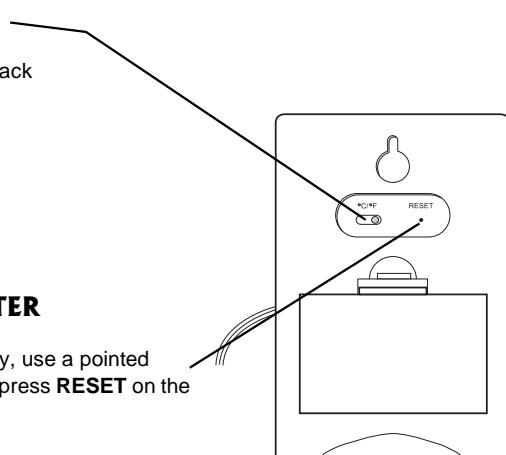

RESETTING THE THERMOMETER

If the thermometer stops operating properly, use a pointed object such as a straightened paper clip to press RESET on the back of the thermometer.

LOW BATTERY INDICATION


If the battery is weak, the display dims and the thermometer's sound becomes weak.  appears on the display.

Rear View

CONTROLS AND FEATURES

Dual Display

Use to see both indoor and outdoor temperatures at the same time in Fahrenheit or Celsius.

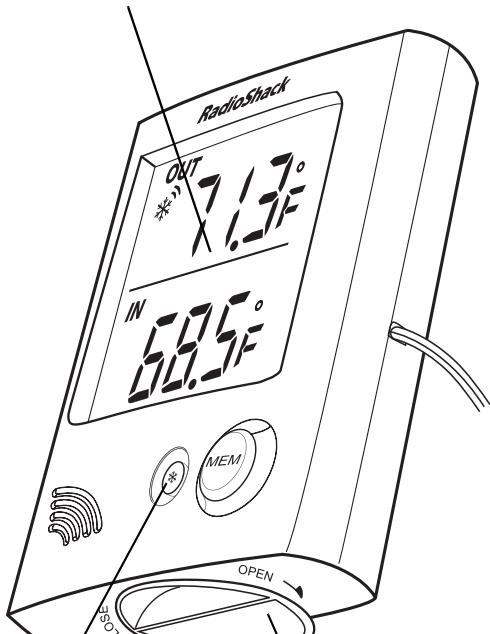

CAUTION


- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the thermometer for a month or more, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

Built-in Stand — Lets you mount the thermometer on a desk, shelf, or table. Simply push the stand in the direction of the arrow marked OPEN until it clicks to open it.


Ice Warning Alarm — Use to set the thermometer so it sounds an alarm if the outdoor temperature falls below 37.4°F (3°C).

OPERATION


USING MAXIMUM/MINIMUM TEMPERATURE MEMORY

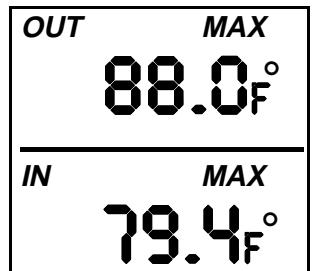

Press MEM once. The maximum (MAX) indoor and outdoor temperatures appear for about 5 seconds.

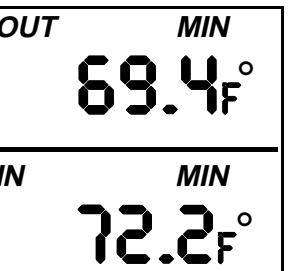

Press MEM again within 5 seconds. The minimum (MIN) indoor and outdoor temperatures appear for about 5 seconds.

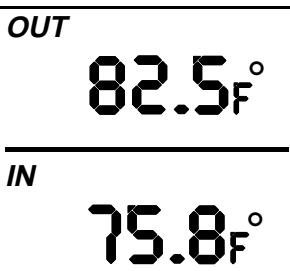

Press MEM again. The current indoor and outdoor temperatures appear even if you do not press MEM.

NOTE

- Remove the protective film from the display before use.
- Your thermometer beeps each time you press a key.

To clear the temperature memory and reset it to the current temperature, hold down MEM for about 2 seconds.

To turn off the ice warning alarm, press  again.  disappears.

USING THE ICE WARNING ALARM

To set the thermometer so  flashes when the temperature is lower than 37.4°F (3°C), press  once.

To set the thermometer so  flashes and an alarm sounds when the temperature is lower than 37.4°F (3°C), press  twice.

Press MEM  to silence the alarm sooner.

SPECIFICATIONS

Power 3V with 2 AAA batteries (not supplied)

Temperature Operating Range

Indoor	23°F to 122°F (-5°C to 50°C)
Outdoor	-58°F to 158°F (-50°C to 70°C)
Resolution	0.1°F (0.1°C)

Accuracy

Indoor	+/- 4°F (+/- 2°C) at 23 to 32°F (-5 to 0°C)
	+/- 2°F (+/- 1°C) at 32 to 104°F (0 to 40°C)
	+/- 4°F (+/- 2°C) at 104 to 122°F (40 to 50°C)
Outdoor	+/- 4° (-/+ 2°C) at -40 to 32°F (-40 to 0°C)
	+/- 2°F (+/- 1°C) at 32 to 104°F (0 to 40°C)
	+/- 4°F (+/- 2°C) at 104 to 122°F (40 to 50°C)
	+/- 6°F (+/- 3°C) at -58 to -40°F (-50 to -40°C)
	+/- 6°F (+/- 3°C) at 122 to 158°F (50 to 70°C)

Dimensions 2.56 x 3.39 x 1.38 Inches (6.5 x 8.6 x 3.3 cm)

Weight 7 oz (198 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

CARE

Keep the thermometer dry; if it gets wet, wipe it dry immediately. Use and store the thermometer only in normal temperature environments. Handle the thermometer carefully; do not drop it. Keep the thermometer away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Limited One-Year Warranty
This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.
In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.
This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lighting or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.
This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102
12/99